

FX1 – Security Screws

Stainless steel screws can only be removed using a dedicated tool.

Normally two security screws are sufficient for one sign and used in conjunction with our brass domehead screws.

These screw heads do not adhere to paint very well so we supply unpainted.

Pack of 2 No. screws and tool.